

CONVOY I

OPERATIONAL GUIDE

DIRECT AIR


APPLIES TO ALL CONVOY I MODELS



Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)

Lever ★ Sets Seat **Memory** Position

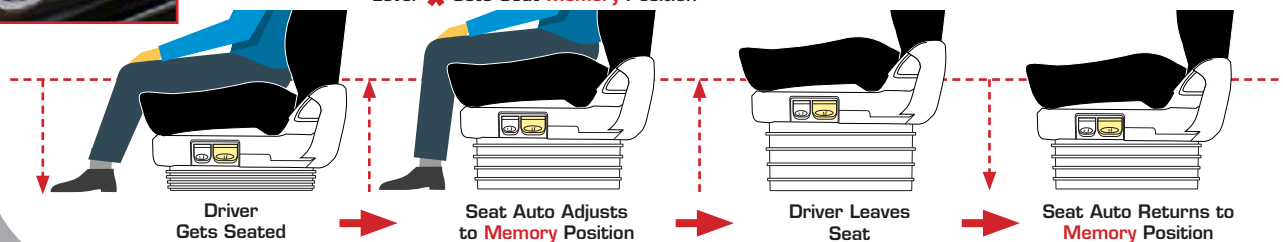

CONVOY II

OPERATIONAL GUIDE

DIRECT AIR


APPLIES TO ALL CONVOY II MODELS



Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)

Lever ★ Sets Seat **Memory** Position

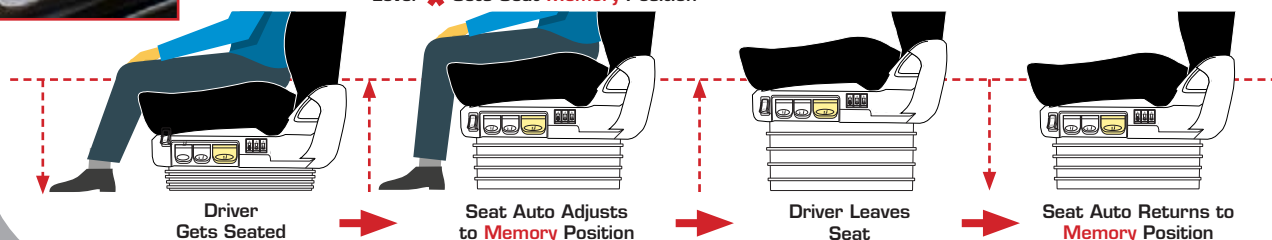

CONVOY III

OPERATIONAL GUIDE

DIRECT AIR


APPLIES TO ALL CONVOY III MODELS



Manual Air Height Adjustable Memory

(Pull Lever UP ▲ to Raise & DOWN ▼ to Lower • Sets Memory Position - While Seated)

Lever ★ Sets Seat **Memory** Position

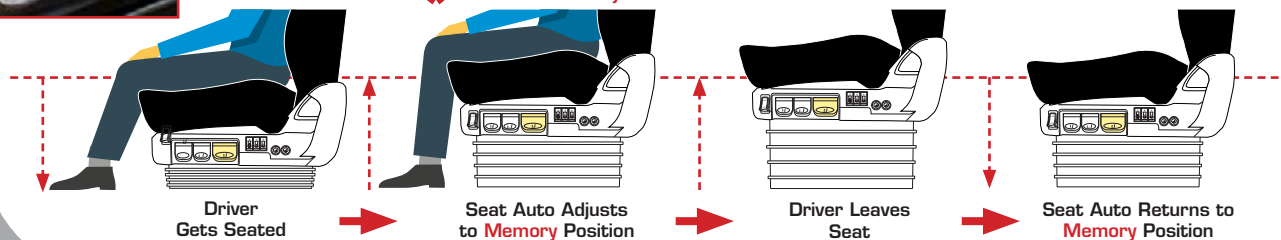

CONVOY I

OPERATIONAL GUIDE


12 VOLT

APPLIES TO ALL CONVOY I MODELS



Manual Air Height Adjustment

(Pull Lever UP ▲ to Turn on Compressor, Pull Down ▼ to Lower)

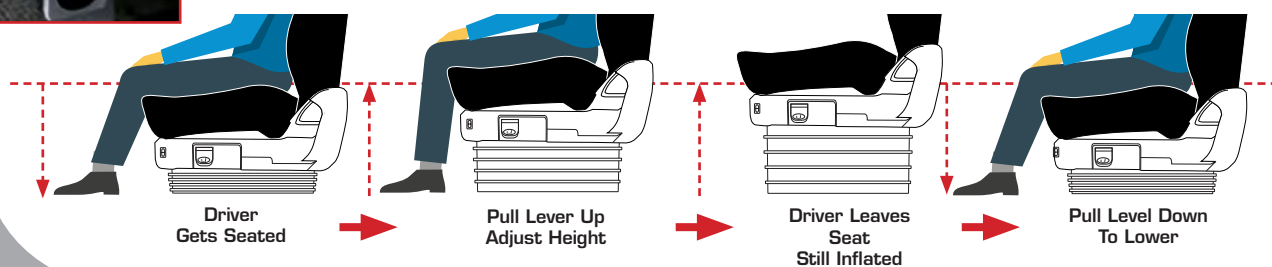

CONVOY II

OPERATIONAL GUIDE


12 VOLT

APPLIES TO ALL CONVOY II MODELS



Manual Air Height Adjustment

(Pull Lever UP ▲ to Turn on Compressor, Pull Down ▼ to Lower)

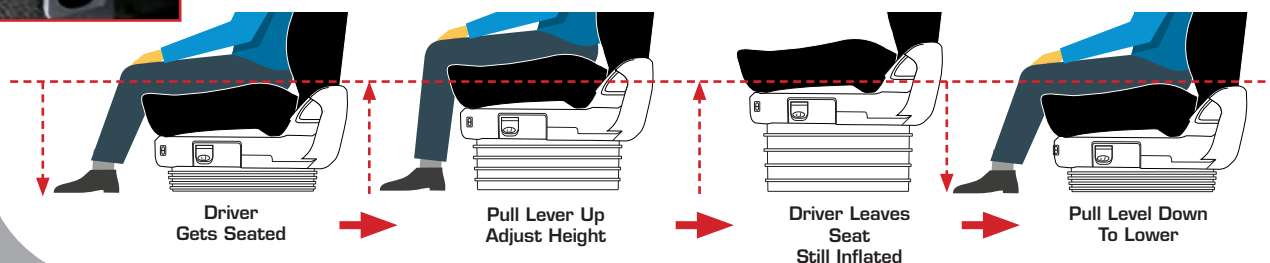

CONVOY III

OPERATIONAL GUIDE

12 VOLT

APPLIES TO ALL CONVOY III MODELS



Manual Air Height Adjustment

(Pull Lever UP ▲ to Turn on Compressor, Pull Down ▼ to Lower)

