

CONVOY HINO ADAPTER

INSTALLATION GUIDE

SCAN FOR GUIDES





Guides also available at:
<https://www.ultraseat.com/downloads>



15002208

APPLIES TO CONVOY HINO ADAPTER



1. 3/8" x 1" BOLT (X4)	2. 3/8" FLAT WASHER (X8)	3. 3/8" NYLOCK WASHER (X4)
		

HIGH BASE SHOWN, LOW BASE HOLES ARE IDENTICAL

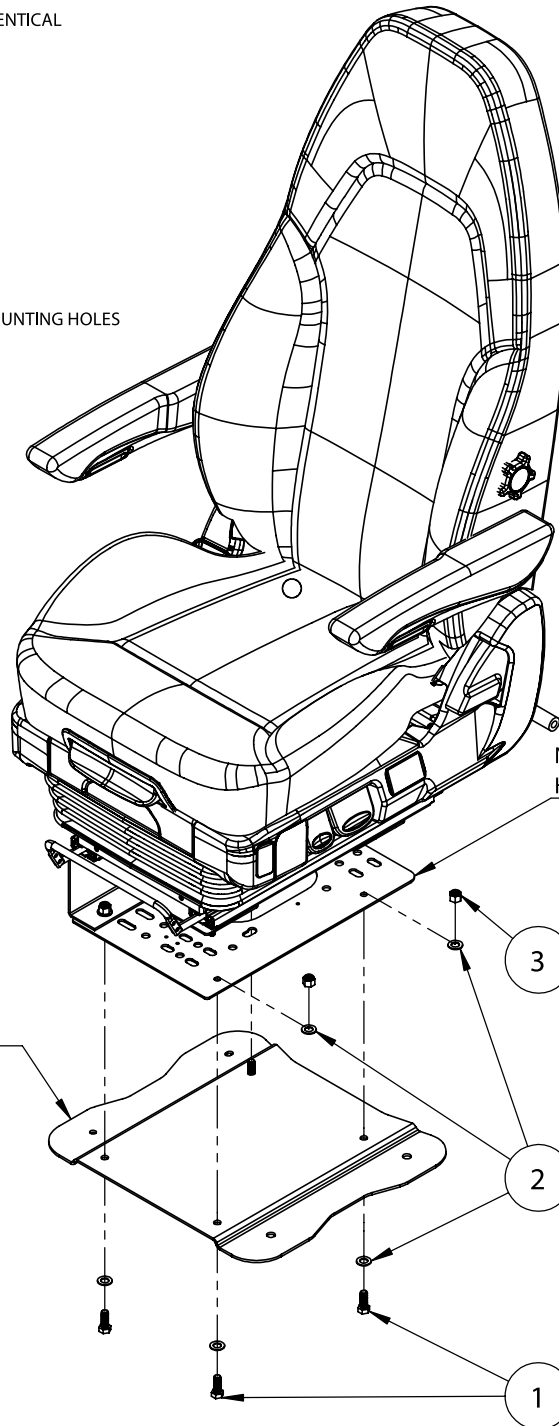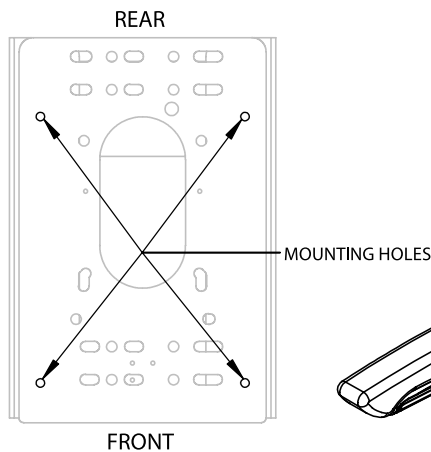

NOTE: BRACKET IS NOT SYMMETRICAL,
 INDENTED END ALWAYS FACES
 TOWARDS THE REAR

NOTE: LEFT SIDE OF BASE
 HIDDEN FOR CLARIFICATION