

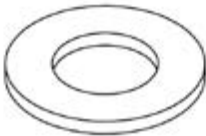
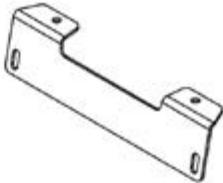
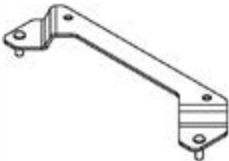
REFUSE (T774HD)

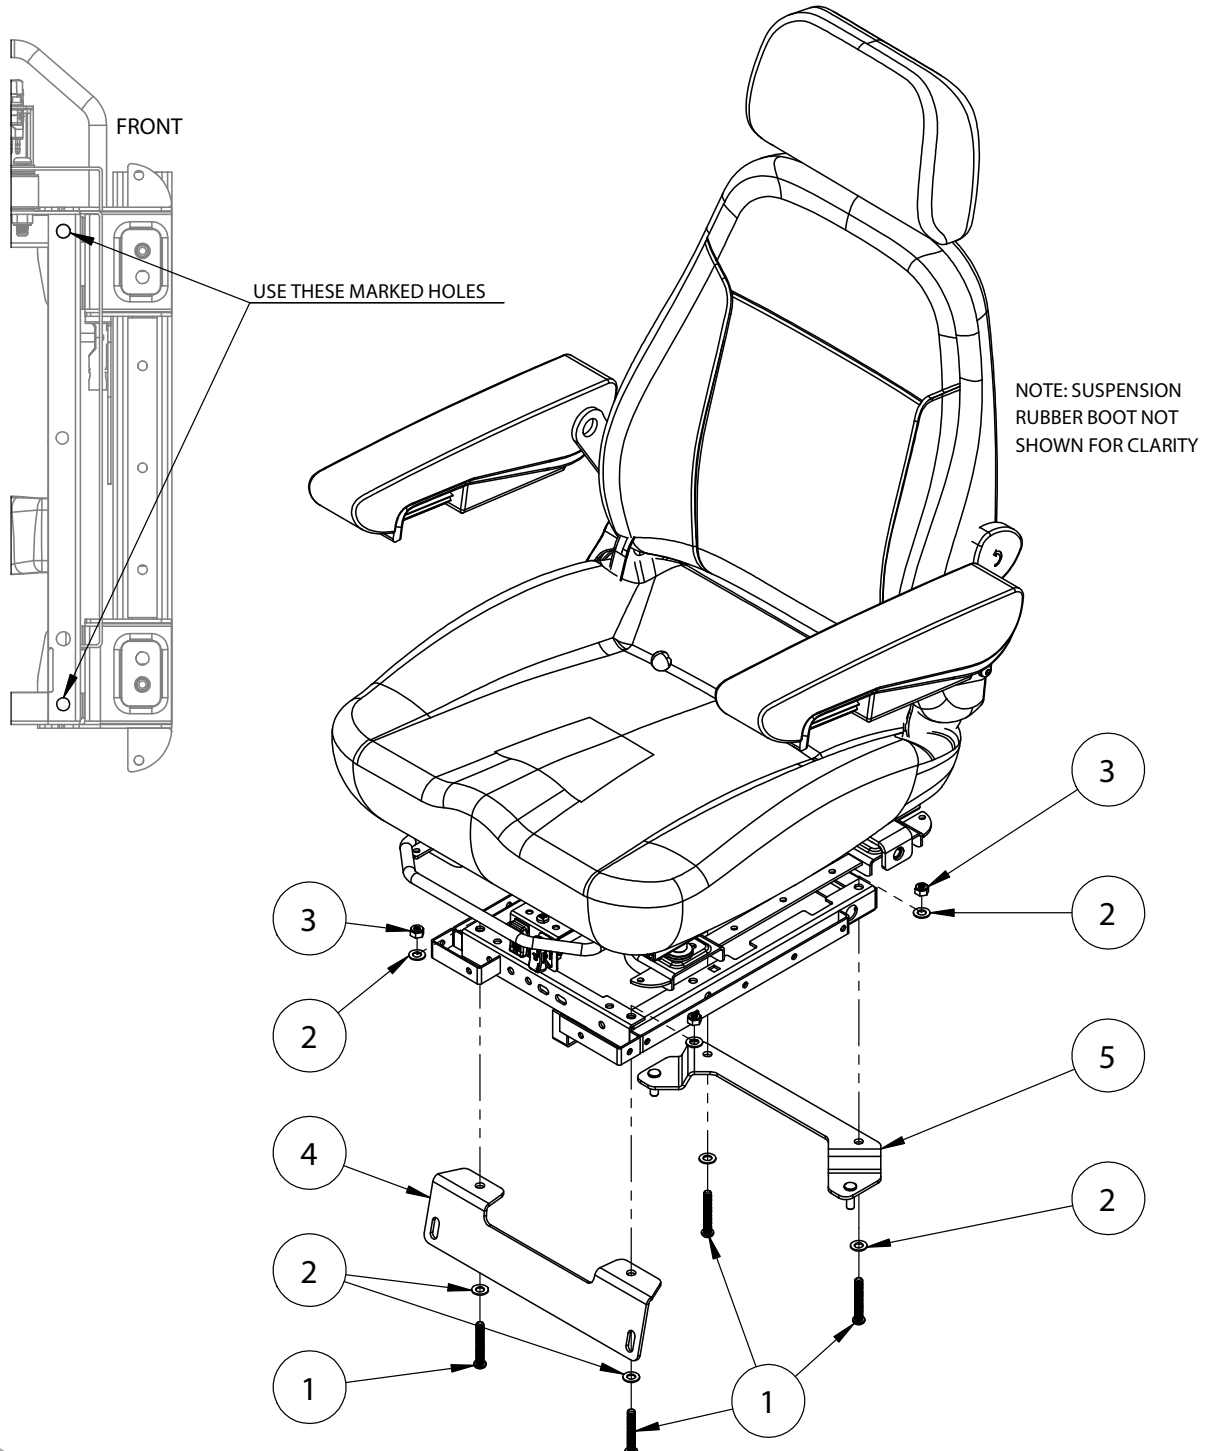
MACK MR ASSEMBLY - INSTALLATION GUIDE



ULTRA SEAT CORPORATION

KIT #350207 - MACK MR MOUNTING ADAPTER

1.	2.	3.	4.	5.
200152 X4 M8X50MM BOLT	200264 X8 M8 FLAT WASHER	200216 X4 M8 NYLOCK NUT	350207F X1 MR FRONT BRACKET	350207B X1 MR REAR BRACKET
				



#350207

Call Support 1-800-667-7328

www.ultraseat.com

UPDATED: 2025/11/17